

MB 2000/AVR - 176036; MB 2000 - 176036; MBA 2000/AVR - 176307; MBA 2000 - 176307

POS. No.	Ref.No.	Description	POS. No.	Ref.No.	Description	
1	174013	Gear box	33	360646	Screw 4x9,5	
2	330125	Bearing HK 1212	34	152537	Screw 3,9X74	
3	330944	Bearing 6300.2RSL.P63.LDS18SpA	35	154350	Fan	
4	153341	Gasket	36	151648	Protective washer	
5	173936	Inner Flange	37	331149	Bearing 608-2RS-P63.LDS18SpA	
6	173934	Circlip	38	174002	Handle	
7	174022	Spindle	39	170668	Switch PS16E01	
8	173935	Rubber bush	40	360654	Screw 4x18	
9	174012	Bearing bed	41	151671	Cord clamp	
10	117504	Spacer washer	42	360646	Screw 4x9,5	
11	117505	Spacer washer	43	361120	Screw K5X40(D10)	
[1][2]	12	152668	Gear set	44	120724	Cord protector
[3][4]	12	152668	Gear set	45	152574	Cord with a plug
13	113256	Nut	46	360255	Screw A-K 5x30	
14	174007	Bush	47	121837	Back up disc washer	
15	174021	Spring	48	121838	Locking nut	
16	174008	Pin	[1][2]	49	151276	Disk guard 180E
17	330344	O-ring 6X1.5B.NBR70	[3][4]	49	151268	Disk guard 230E
18	330352	O-ring 80X2B	50	154269	Special spanner 240	
19	360246	Screw M5x16	[1][3]	51	173725	Handle AVR M14/L12
20	174006	Button	[2][4]	51	121265	Handle
21	174020	Protective washer	52	113244	Spiral spring	
22	330473	Circlip A40-1D	60	174025	Bearing bed set	
23	330124	Bearing 6203-2RS	[1][3]201	177446	Operating instruction	
24	174010	Body	[2][4]201	176244	Operating instruction	
25	174005	Brush holder cover	202	174349	Tool case	
26	174004	Diffuser	204	179862	Grease 4 - 1,00 kg.	
27	176451	Stator set				
28	174040	Armature set				
29	190020	Brush holder set				
30	153014	Brush				
31	153015	Brush with a switch				
32	164934	Rubber bush				

Note:
 [1] - only for MB 2000/AVR; [2] - only for MB 2000;
 [3] - only for MBA 2000/AVR; [4] - only for MBA 2000

MB 2000/AVR
 MB 2000
 MBA 2000/AVR
 MBA 2000

