

PROFESSIONAL

MBS 976 - 180081; MBS 976E - 180082

POS. No.	Ref.No.	Description
1	183497	Adjustment Washer MBS 976&MBS 976E
2	183496	Bearing 608-2Z MBS 976&MBS 976E
3	183494	Pin MBS 976&MBS 976E
4	183495	Roller MBS 976&MBS 976E
5	183493	Spring MBS 976&MBS 976E
6	183498	Fork MBS 976&MBS 976E
7	183499	Rivet Screw MBS 976&MBS 976E
8	183500	Big Spring MBS 976&MBS 976E
9	183491	Washer MBS 976&MBS 976E
10	183492	Lever MBS 976&MBS 976E
11	183502	Screw ST4.1X45 MBS 976&MBS 976E
12	183501	Clamp Device MBS 976&MBS 976E
13	183490	Base Sheet MBS 976&MBS 976E
14	183488	Driving Wheel MBS 976&MBS 976E
15	183487	Washer MBS 976&MBS 976E
16	183486	Ring MBS 976&MBS 976E
17	183485	Bearing 626-Z MBS 976&MBS 976E
18	183484	Sleeve MBS 976&MBS 976E
19	183479	Needle Bearing HK081210 MBS 976&MBS 976E
20	183483	Adjustment Washer MBS 976&MBS 976E
21	183482	Pin MBS 976&MBS 976E
22	183480	Shaft MBS 976&MBS 976E
23	183481	Big Gear MBS 976&MBS 976E
[1]	24	183446 Lead 2 MBS 976
[2]	24	183505 P.C.B. Board MBS 976E
25	183445	Lead 1 MBS 976&MBS 976E
26	183443	Screw ST2.9X12 MBS 976&MBS 976E
27	183441	Screw ST4.1X16 MBS 976&MBS 976E
[1]	28	183442 Right Housing MBS 976
[2]	28	183504 Right Housing MBS 976E
29	183444	Inductor Ass'y MBS 976&MBS 976E
30	183439	Switch MBS 976&MBS 976E
31	183438	Capacitor MBS 976&MBS 976E
32	183437	Cord Clamp MBS 976&MBS 976E
33	183436	Cord Protector MBS 976&MBS 976E
[1]	34	183435 Power Cord MBS 976
[2]	34	183503 Power Cord MBS 976E
35	183447	Middle Housing MBS 976&MBS 976E

POS. No.	Ref.No.	Description
36	183448	„U“ ceramic MBS 976&MBS 976E
37	183478	Ring MBS 976&MBS 976E
38	183477	Washer MBS 976&MBS 976E
39	183476	Adjustment Knob MBS 976&MBS 976E
40	183475	Knob Cover MBS 976&MBS 976E
41	183474	Stator Ass'y MBS 976&MBS 976E
42	183455	Screw ST4.1X60 MBS 976&MBS 976E
43	183472	Fan Baffle MBS 976&MBS 976E
44	183471	Relief Washer MBS 976&MBS 976E
45	183449	Bearing 626-2Z MBS 976&MBS 976E
46	183467	Armature Ass'y MBS 976&MBS 976E
47	183470	Carbon Brush MBS 976&MBS 976E
48	183469	Brush Holder MBS 976&MBS 976E
49	183468	Brush Support
50	183450	Screw ST2.9X10(C) MBS 976&MBS 976E
51	183451	Brush Clamp MBS 976&MBS 976E
52	183466	Bearing Cover MBS 976&MBS 976E
53	183465	Bearing 608-2RS MBS 976&MBS 976E
54	183452	Spindle Shaft MBS 976&MBS 976E
55	183453	Bearing 627-2Z MBS 976&MBS 976E
56	183454	Middle Housing MBS 976&MBS 976E
57	183489	Aluminium Support MBS 976&MBS 976E
58	183456	Screw 4.1X12 MBS 976&MBS 976E
59	183457	Elastic Washer MBS 976&MBS 976E
60	183458	Big Wheel MBS 976&MBS 976E
61	183459	Belt Cover MBS 976&MBS 976E
62	183461	Drive Belt MBS 976&MBS 976E
63	183462	Small Pulley MBS 976&MBS 976E
70	183513	Dust Bag Ass'y MBS 976&MBS 976E
71	183839	Ring MBS 976&MBS 976E
204	179860	Grease 2 - 1,00 kg.

Note:
[1] - only for MBS 976; [2] - only for MBS 976E

**MBS 976
MBS 976E**

